© ASHRAE. Per international copyright law, additional reproduction, distribution, or transmission in either print or digital form is not permitted without ASHRAE's prior written permission.



ADDENDA

ANSI/ASHRAE Addendum cj to ANSI/ASHRAE Standard 135-2020

A Data Communication Protocol for Building Automation and Control Networks

Approved by ASHRAE and by the American National Standards Institute on September 30, 2024.

This addendum was approved by a Standing Standard Project Committee (SSPC) for which the Standards Committee has established a documented program for regular publication of addenda or revisions, including procedures for timely, documented, consensus action on requests for change to any part of the standard. Instructions for how to submit a change can be found on the ASHRAE® website (www.ashrae.org/continuous-maintenance).

The latest edition of an ASHRAE Standard may be purchased on the ASHRAE website (www.ashrae.org) or from ASHRAE Customer Service, 180 Technology Parkway, Peachtree Corners, GA 30092. E-mail: orders@ashrae.org. Fax: 678-539-2129. Telephone: 404-636-8400 (worldwide), or toll free 1-800-527-4723 (for orders in US and Canada). For reprint permission, go to www.ashrae.org/permissions.

© 2024 ASHRAE ISSN 1041-2336



© ASHRAE. Per international copyright law, additional reproduction, distribution, or transmission in either print or digital form is not permitted without ASHRAE's prior written permission.

ASHRAE Standing Standard Project Committee 135
Cognizant TC: 1.4, Control Theory and Application
SPLS Liaison: Paul Lindahl

Coleman L. Brumley, Jr.*, Chair David Fisher David Robin* Scott Ziegenfus, Vice Chair Alexander Gurciullo* Frank Schubert Salvatore Cataldi*, Secretary Bernhard Isler Steven C. Sill* Nate Benes* Thomas Kurowski* Marcelo Richter da Silva Steven T. Bushby* Shahid Naeem Ted Sunderland James F. Butler Frank Victor Neher* Lori Tribble Tyler Cove Michael Osborne* Grant N. Wichenko* Scott Reed Brandon Michael DuPrey* Christoph Zeller

ASHRAE STANDARDS COMMITTEE 2024–2025

Douglas D. Fick, Chair Satish N. Iyengar Gwelen Paliaga Phillip A. Johnson Adrienne G. Thomle, Vice Chair Karl L. Peterman Paul A. Lindahl, Jr. Hoy R. Bohanon, Jr. Justin M. Prosser Kelley P. Cramm Julie Majurin Christopher J. Seeton Abdel K. Darwich Lawrence C. Markel Paolo M. Tronville Drake H. Erbe Margaret M. Mathison Douglas K. Tucker Patricia Graef Kenneth A. Monroe William F. Walter David P. Yuill William M. Healy Daniel H. Nall Jaap Hogeling Philip J. Naughton Susanna S. Hanson, BOD ExO lennifer A. Isenbeck Kathleen Owen Wade H. Conlan, CO

Ryan Shanley, Senior Manager of Standards

SPECIAL NOTE

This American National Standard (ANS) is a national voluntary consensus Standard developed under the auspices of ASHRAE. *Consensus* is defined by the American National Standards Institute (ANSI), of which ASHRAE is a member and which has approved this Standard as an ANS, as "substantial agreement reached by directly and materially affected interest categories. This signifies the concurrence of more than a simple majority, but not necessarily unanimity. Consensus requires that all views and objections be considered, and that an effort be made toward their resolution." Compliance with this Standard is voluntary until and unless a legal jurisdiction makes compliance mandatory through legislation.

ASHRAE obtains consensus through participation of its national and international members, associated societies, and public review.

ASHRAE Standards are prepared by a Project Committee appointed specifically for the purpose of writing the Standard. The Project Committee Chair and Vice-Chair must be members of ASHRAE; while other committee members may or may not be ASHRAE members, all must be technically qualified in the subject area of the Standard. Every effort is made to balance the concerned interests on all Project Committees.

The Senior Manager of Standards of ASHRAE should be contacted for

- a. interpretation of the contents of this Standard,
- b. participation in the next review of the Standard,
- c. offering constructive criticism for improving the Standard, or
- d. permission to reprint portions of the Standard.

DISCLAIMER

ASHRAE uses its best efforts to promulgate Standards and Guidelines for the benefit of the public in light of available information and accepted industry practices. However, ASHRAE does not guarantee, certify, or assure the safety or performance of any products, components, or systems tested, installed, or operated in accordance with ASHRAE's Standards or Guidelines or that any tests conducted under its Standards or Guidelines will be nonhazardous or free from risk.

ASHRAE INDUSTRIAL ADVERTISING POLICY ON STANDARDS

ASHRAE Standards and Guidelines are established to assist industry and the public by offering a uniform method of testing for rating purposes, by suggesting safe practices in designing and installing equipment, by providing proper definitions of this equipment, and by providing other information that may serve to guide the industry. The creation of ASHRAE Standards and Guidelines is determined by the need for them, and conformance to them is completely voluntary.

In referring to this Standard or Guideline and in marking of equipment and in advertising, no claim shall be made, either stated or implied, that the product has been approved by ASHRAE.

^{*} Denotes members of voting status when the document was approved for publication

[This foreword, the table of contents, the introduction, and the "rationales" on the following pages are not part of this standard. They are merely informative and do not contain requirements necessary for conformance to the standard.]

FOREWORD

Addendum cj is the result of change proposals made pursuant to the ASHRAE continuous maintenance procedures and of deliberations within Standard Project Committee 135. The changes are summarized as follows:

135-2020*cj*-1 Add a method for restoring luminaire levels, p. 3 135-2020*cj*-2 Add a method for toggling the Binary Lighting Output Object, p. 7 135-2020*cj*-3 Clarify terminology for Current Command Priority, p. 8

In the following document, language to be added to existing clauses of ANSI/ASHRAE 135-2020 is indicated through the use of *italics*, while deletions are indicated by strikethrough. Where entirely new subclauses are proposed to be added, plain type is used throughout. Only this new and deleted text is open to comment at this time. All other material in this document is provided for context only and is not open for public review comment except as it relates to the proposed changes.

The use of placeholders like XX, YY, ZZ, X1, X2, NN, x, n, ? etc. should not be interpreted as literal values of the final published version. These placeholders will be assigned actual numbers/letters only after final publication approval of the addendum.

135-2020cj-1 Add a method for restoring luminaire levels

Rationale

Add a standardized method of turning on luminaires to the last on-value in order to support dimmable luminaires.

[Change Table 12-64, p. 519]

Table 12-64. Properties of the Lighting Output Object Type

Property Identifier	Property Datatype	Conformance Code
Last_On_Value	REAL	R
Default_On_Value	REAL	R
Audit Level	BACnetAuditLevel	O^{11}

[Change Clause 12.54.4, p. 536]

12.54.4 Present_Value (Commandable)

. . .

The Present_Value supports special values outside of the normal range of values to provide blink-warn functionality from objects and devices that are unable to write the complex datatypes used in the Lighting Command property (e.g., the BACnet Schedule object type). The special values of the Present Value are summarized in Table 12-65.

Table 12-65. Special Values of the Present Value Property

Value	Description
-1.0	Provides the same functionality as the WARN lighting command.
-2.0	Provides the same functionality as the WARN RELINQUISH lighting command.
-3.0	Provides the same functionality as the WARN OFF lighting command.
-4.0	Provides the same functionality as the RESTORE ON lighting command.
-5.0	Provides the same functionality as the DEFAULT ON lighting command.
-6.0	Provides the same functionality as the TOGGLE RESTORE lighting command
-7.0	Provides the same functionality as the TOGGLE_DEFAULT lighting command

[Change Clause 12.54.6, p. 536]

• • •

Table 12-67. Lighting Commands

Table 12-67. Lighting Commands	
Operation	Description
RESTORE_ON	Commands Present_Value to the value of the Last_On_Value property.
	The restore-on operation is implemented by writing the Last_On_Value to the specified slot in the priority array.
	syntax: <pre> <pre< td=""></pre<></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre>
DEFAULT_ON	Commands Present_Value to the value of the Default_On_Value property.
	The default-on operation is implemented by writing the Default_On_Value to the specified slot in the priority array.
	syntax: <pre></pre>
TOGGLE_RESTORE	Commands Present_Value to change its "last on" level
	If the priority is numerically higher than the current command priority, then the command shall be considered successful, but the content of the priority array shall not be modified.
	Prior to the execution of this command, if Present_Value is 0.0%, write the Last_On_Value to the specified slot in the priority array.
	Prior to the execution of this command, if Present_Value is not 0.0%, write 0.0% to the specified slot in the priority array.
	syntax: <pre><operation =="" toggle_restore=""> [priority]</operation></pre>
TOGGLE_DEFAULT	Commands Present_Value to change its "default on" level
	If the priority is numerically higher than the current command priority, then the command shall be considered successful, but the content of the priority array shall not be modified.
	Prior to the execution of this command, if Present_Value is 0.0%, write the Default_On_Value to the specified slot in the priority array.
	Prior to the execution of this command, if Present_Value is not 0.0%, write 0.0% to the specified slot in the priority array.
	syntax: <pre><operation =="" toggle_default=""> [priority]</operation></pre>

[Change Clause 12.54.44 and 12.54.45, p. 536]

12.54.44 Last On Value

This read-only property, of type Real, represents the last value of the Present_Value property that was greater than or equal to 1.0%. If the Present Value property has never had a value greater or equal to 1.0% then Last On Value shall be 100.0%.

12.54.45 Default_On_Value

This property, of type REAL, indicates the value that is used as the target value when a DEFAULT_ON command is executed. The range of allowable Default On Value values is 1.0% to 100.0%.

[Renumber Clauses 12.54.44 through 12.54.59, increasing clause numbers by 2, p. 536 - 537]

```
12.54.4446 Audit Level
12.54.4547 Auditable Operations
12.54.4648 Audit Priority Filter
12.54.4749 Tags
12.54.4850 Profile Location
12.54.4951 Profile_Name
[Extend BACnetLightingOperation definition in clause 21, p. 885]
BACnetLightingOperation ::= ENUMERATED {
        none
                             (0),
        fade-to
                             (1),
        ramp-to
                             (2),
        step-up
                             (3),
        step-down
                             (4),
```

(5),

(6),

(7),

(8),

(9), (10),

(11), (12),

(13),

(14)

step-on

step-off

warn-off

default-on toggle-restore

toggle-default

warn-relinquish

warn

stop restore-on

[Chnnge BACnetPropertyIdentifier definition in clause 21, p. 925]

default-fade-time (374),default-on-value (4194341), default-present-value (492),last-notify-record (173),(4194342), last-on-value last-priority (369),-- see default-on-value (4194341), (4194342),-- see last-on-value

135-2020cj-2 Add a method for toggling the Binary Lighting Output Object

Rationale

Add a standardized method for toggling the Binary Lighting Output Object.

[Change Table 12-70, p. 533]

Table 12-70. Special Values for the Present_Value Property

Operation	Description
TOGGLE	Commands Present_Value to change its state
	If the priority is numerically higher than the current command priority, then the command shall be considered successful, but the content of the priority array shall not be modified.
	Prior to the execution of this command, if the Present_Value property is currently OFF, write ON to the specified slot in the priority array.
	Prior to the execution of this command, if the Present_Value property is currently ON, write OFF to the specified slot in the priority array.

[Extend BACnetBinaryLightingPV definition in clause 21, p. 889]

```
\begin{array}{lll} \textbf{BACnetBinaryLightingPV} ::= & \texttt{ENUMERATED} \; \{\\ & \text{off} & (0),\\ & \text{on} & (1),\\ & \text{warn} & (2),\\ & \text{warn-off} & (3),\\ & \text{warn-relinquish} & (4),\\ & \text{stop} & (5),\\ & & toggle & (6) \\ \} \end{array}
```

135-2020cj-3 Clarify terminology for Current Command Priority

Rationale

Propose specific language changes to clarify the meaning of "highest" and "lowest" and to unify the use of the term Current Command Priority.

[Add to 3.2]

. . .

current command priority: In priority arrays, the array index of the entry in the priority array from which the Present_Value's value has been taken.

[Change Table 12-66]

priority	This field, of type Unsigned (116), represents the priority values 1 (highest priority)
	through 16 (lowest priority). See 19.2. If this field is not specified, then the value of Lighting Command Default Priority specifies
	the priority to be used.

[Change Table 12-67]

FADE_TO	Commands Present_Value to fade from the current Tracking_Value to the target-level specified in the command at the specified priority. The fade operation is implemented by first writing target-level to the specified slot in the priority array then reevaluating the priority array.
	If the fade command is the highest priority when written, then After the reevaluation of the priority array, if the provided priority is not the current command priority, this fade operation shall not be executed. Otherwise, the fade operation continues by changing the physical lighting output proportionally from its current value to target-level, over a period of time defined by fade-time. While the fade operation is executing, In_Progress shall be set to FADE_ACTIVE, and Tracking_Value shall be updated to reflect the current progress of the fade.
	If the fade command is not the highest priority when written, then this fade operation is not executed.
	syntax: <pre> <operation =="" fade_to=""> <target-level> [priority] [fade-time]</target-level></operation></pre>

RAMP_TO	Commands Present_Value to ramp from the current Tracking_Value to target-level specified in the command at the specified priority. The ramp operation is implemented by first writing target-level to the specified slot in the priority array then reevaluating the priority array. If the ramp command is the highest priority when written, After the reevaluation of the priority array, if the provided priority is not the current command priority, then the ramp operation continues by changing the physical lighting output proportionally from its current value to target-level, with a fixed rate of change defined by ramp-rate. While the ramp operation is executing, In_Progress shall be set to RAMP_ACTIVE, and Tracking_Value shall be updated to reflect the current progress of the fade. If the ramp command is not the highest priority when written, then this ramp operation is not executed. syntax:
	<pre><operation =="" ramp_to=""> <target-level> [priority] [ramp-rate]</target-level></operation></pre>
WARN	Executes a blink-warn notification at the specified priority. After the blink-warn notification has been executed, the value at the specified priority in the priority array is unchanged.
	The blink warn notification shall not occur if any of the following conditions occur: (a) The specified priority is not the highest active priority, or (b) The value at the specified priority is 0.0%, or (c) Blink_Warn_Enable is FALSE. The blink-warn notification shall only occur if Blink_Warn_Enable is TRUE, the Present_Value is not 0.0%, and the specified priority is the current command priority.
	See Clause 12.54.6.2 Blink-Warn Behavior.
	syntax: <pre><operation =="" warn=""> [priority]</operation></pre>
WARN_RELINQUISH	Executes a blink-warn notification at the specified priority and then relinquishes the value at the specified priority in the priority arrany after a delay of Egress_Time seconds.
	The blink-warn notification shall not occur, and the value at the specified priority shall be relinquished immediately if any of the following conditions occur: (a) The specified priority is not the highest active priority, or (b) The value at the specified priority is 0.0% or NULL, or (c) The value of the next highest non NULL priority, including Relinquish_Default, is greater than 0.0%, or (d) Blink_Warn_Enable is FALSE. (a) Blink_Warn_Enable is FALSE, or (b) The Present_Value is 0.0%, or (c) The Present_Value would not evaluate to 0.0% after the priority slot is relinquished. See Clause 12.54.6.2 Blink-Warn Behavior. syntax: <pre></pre>

Executes a blink-warn notification at the specified priority and then writes the value 0.0% to the specified slot in the priority array after a delay of Egress_Time seconds.
The blink-warn notification shall not occur and the value 0.0% shall be written at the
specified priority immediately if any of the following conditions occur:
(a) The specified priority is not the highest active priority, or
(b) The Present Value is 0.0%, or
(c) Blink_Warn_Enable is FALSE
(a) Blink_Warn_Enable is FALSE, or
(b) The Present Value is 0.0%, or
(c) The specified priority is not the <i>current command priority</i>
See Clause 12.54.6.2 Blink-Warn Behavior.
syntax:
<pre><operation =="" warn_off=""> [priority]</operation></pre>

[Change 12.54.19 Transition]

12.54.19 Transition

This property, of type BACnetLightingTransition, specifies how a change in the Present_Value transitions from the current level to the target level. A transition comes into effect when the Present_Value is directly commanded or when the eurrent highest priority value current command priority has been relinquished. Writing the Lighting commands FADE_TO, RAMP_TO, STEP_ON, STEP_OFF, STEP_UP, or STEP_DOWN shall ignore the Transition property.

The transition may be one of NONE, FADE, or RAMP. The transition NONE causes the Present_Value to immediately be set to the target level when the highest priority value the *current command priority* has been relinquished. If this property does not exist, then the transition type shall be assumed to be NONE.

[Add a new entry to **History of Revisions**, p. 1364]

(This History of Revisions is not part of this standard. It is merely informative and does not contain requirements necessary for conformance to the standard.)

HISTORY OF REVISIONS

		•••
1	28	Addendum <i>cj</i> to ANSI/ASHRAE Standard 135-2020 Approved by ASHRAE on September 30, 2024; and by the American National Standards Institute on September 30, 2024.
		 Add a method for restoring luminaire levels Add a method for toggling the Binary Lighting Output Object Clarify terminology for Current Command Priority

© ASHRAE. Per international copyright law, additional reproduction, distribution, or transmission in either print or digital form is not permitted without ASHRAE's prior written permission.

POLICY STATEMENT DEFINING ASHRAE'S CONCERN FOR THE ENVIRONMENTAL IMPACT OF ITS ACTIVITIES

ASHRAE is concerned with the impact of its members' activities on both the indoor and outdoor environment. ASHRAE's members will strive to minimize any possible deleterious effect on the indoor and outdoor environment of the systems and components in their responsibility while maximizing the beneficial effects these systems provide, consistent with accepted Standards and the practical state of the art.

ASHRAE's short-range goal is to ensure that the systems and components within its scope do not impact the indoor and outdoor environment to a greater extent than specified by the Standards and Guidelines as established by itself and other responsible bodies.

As an ongoing goal, ASHRAE will, through its Standards Committee and extensive Technical Committee structure, continue to generate up-to-date Standards and Guidelines where appropriate and adopt, recommend, and promote those new and revised Standards developed by other responsible organizations.

Through its *Handbook*, appropriate chapters will contain up-to-date Standards and design considerations as the material is systematically revised.

ASHRAE will take the lead with respect to dissemination of environmental information of its primary interest and will seek out and disseminate information from other responsible organizations that is pertinent, as guides to updating Standards and Guidelines.

The effects of the design and selection of equipment and systems will be considered within the scope of the system's intended use and expected misuse. The disposal of hazardous materials, if any, will also be considered.

ASHRAE's primary concern for environmental impact will be at the site where equipment within ASHRAE's scope operates. However, energy source selection and the possible environmental impact due to the energy source and energy transportation will be considered where possible. Recommendations concerning energy source selection should be made by its members.

ASHRAE · 180 Technology Parkway · Peachtree Corners, GA 30092 · www.ashrae.org

About ASHRAE

Founded in 1894, ASHRAE is a global professional society committed to serve humanity by advancing the arts and sciences of heating, ventilation, air conditioning, refrigeration, and their allied fields.

As an industry leader in research, standards writing, publishing, certification, and continuing education, ASHRAE and its members are dedicated to promoting a healthy and sustainable built environment for all, through strategic partnerships with organizations in the HVAC&R community and across related industries.

To stay current with this and other ASHRAE Standards and Guidelines, visit www.ashrae.org/standards, and connect on Linkedln, Facebook, Twitter, and YouTube.

Visit the ASHRAE Bookstore

ASHRAE offers its Standards and Guidelines in print, as immediately downloadable PDFs, and via ASHRAE Digital Collections, which provides online access with automatic updates as well as historical versions of publications. Selected Standards and Guidelines are also offered in redline versions that indicate the changes made between the active Standard or Guideline and its previous version. For more information, visit the Standards and Guidelines section of the ASHRAE Bookstore at www.ashrae.org/bookstore.

IMPORTANT NOTICES ABOUT THIS STANDARD

To ensure that you have all of the approved addenda, errata, and interpretations for this Standard, visit www.ashrae.org/standards to download them free of charge.

Addenda, errata, and interpretations for ASHRAE Standards and Guidelines are no longer distributed with copies of the Standards and Guidelines. ASHRAE provides these addenda, errata, and interpretations only in electronic form to promote more sustainable use of resources.