## ERRATA SHEET FOR ASHRAE STANDARD 111-1988

January 9, 1997

## **Introduction**

The correction listed in this errata sheet applies to all copies of ANSI/ASHRAE Standard 111-1988 with a blank outside back cover (i.e., no printer's symbol).

## **Errata**

On page 64, Figure D-10, values in table column headed "Position Relative to Inner Wall," in row for 5 points or traverse lines, change the second value:

From: 0.238 To: 0.288

so that the values in the 5-point row read as:

 $0.074,\,0.288,\,0.500,\,0.712,\,0.926$